


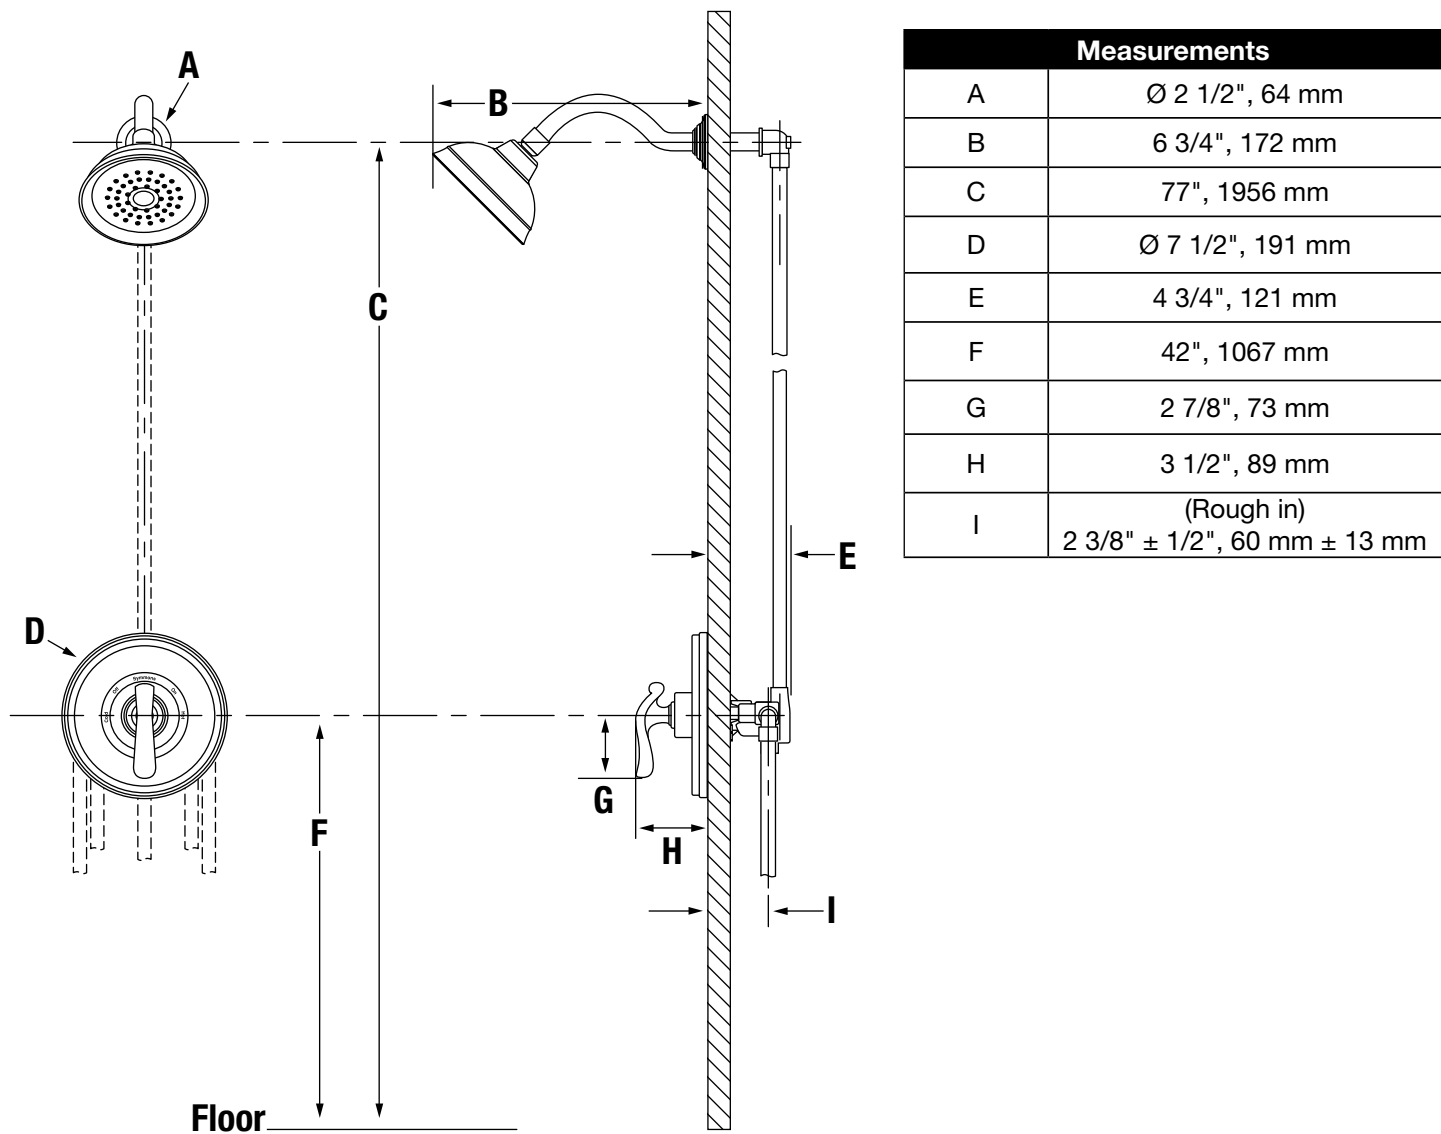


5100-TRM, 5101-TRM
Winslet™ Trim Series
Operation & Maintenance Manual


Model Numbers		Specifications
<input type="checkbox"/> 5100-TRM	Valve Trim	Shower trim includes shower escutcheon kit and 3 mode showerhead with standard 2.5 gpm (9.5 L/min) flow restrictor. Valve trim includes shower escutcheon kit only. Components made from metal and nonmetallic materials plated in standard polished chrome finish.
<input type="checkbox"/> 5101-TRM	Shower Trim	
Modifications		Compliance
<input type="checkbox"/> -1.5	 1.5 gpm (5.7 L/min) flow restrictor	-ASME A112.18.1; CSA B125.1
<input type="checkbox"/> -2.0	 2.0 gpm (7.6 L/min) flow restrictor	
<input type="checkbox"/> -ORB	Oil rubbed bronze finish	
<input type="checkbox"/> -STN	Satin nickel finish	
		Warranty
		Limited Lifetime - to the original end purchaser in consumer installations. 5 Years - for commercial installations. Refer to www.symmons.com/warranty for complete warranty information.
Note: Append appropriate -suffix to model number.		

Dimensions




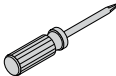


Notes:
1) All dimensions measured from nominal rough-in (see I as reference).
2) Dimensions are subject to change without notice.

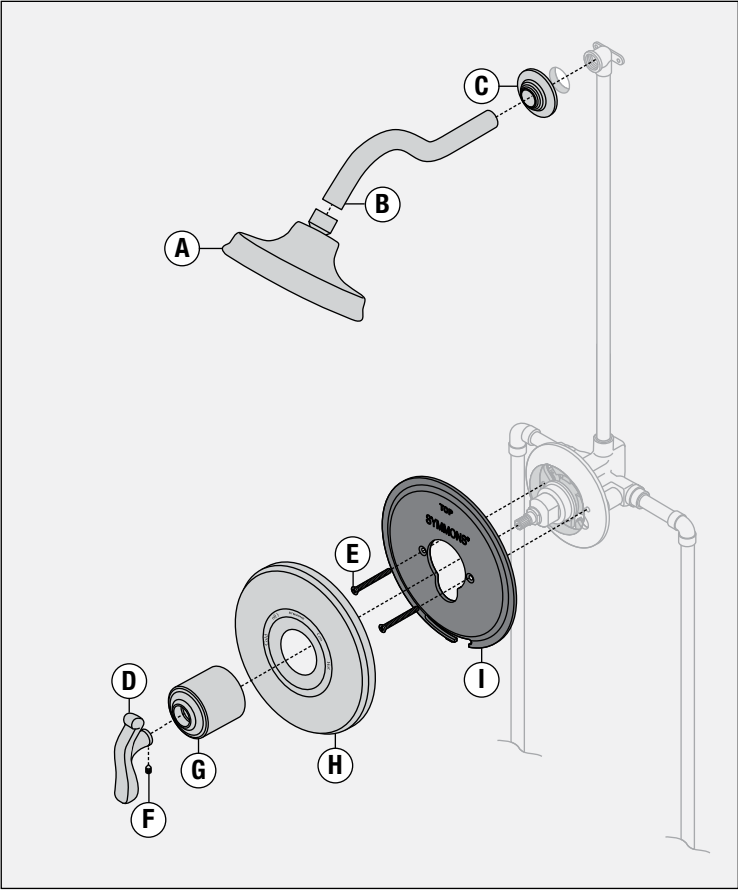Parts Breakdown



Replacement Parts		
Item	Description	Part Number
A	Showerhead	512SH
B	Shower Arm	512SA
C	Shower Arm Flange	
D	Handle	T-611
F	Set Screw	
E	Mounting Screws	T-609-NS-K001
H	Shower Escutcheon	
I	Mounting Plate	
G	Dome Cover	T-608-PL

Note:
1) Append -ORB to part number for oil rubbed bronze finish; -STN for satin nickel.
2) Append -1.5 or -2.0 to showerhead for low flow.


Required for Installation	
Adjustable wrench	
Phillips head screwdriver	
Allen wrench (1/8")	
Plumber tape	

Installation


Note:

For valve body installation, please see valve body installation guide.

- 1) Install plastic mounting plate (I) to shower valve. Secure with two screws (E).

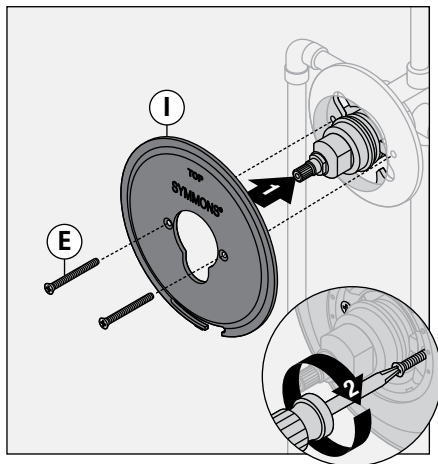


- 2) Attach escutcheon (H) to plastic mounting plate (I).

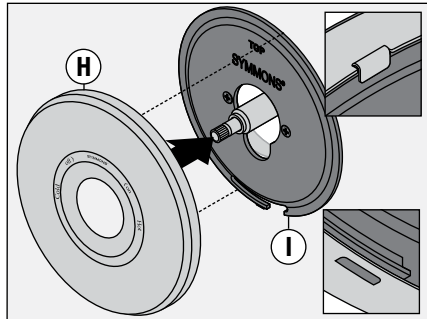


Note: Tabs should snap into place.

- 3) Install dome cover (G) to valve by turning clockwise.

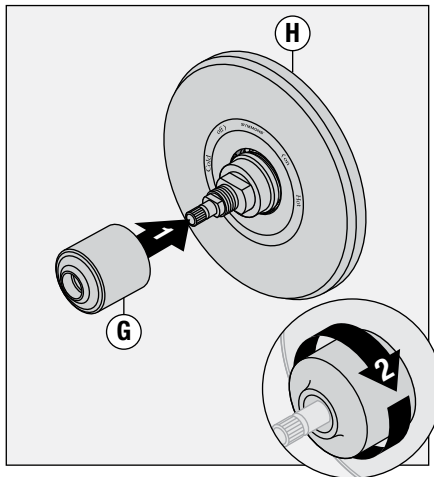


- 4) Install handle (D) to valve. Secure handle by tightening set screw (F).

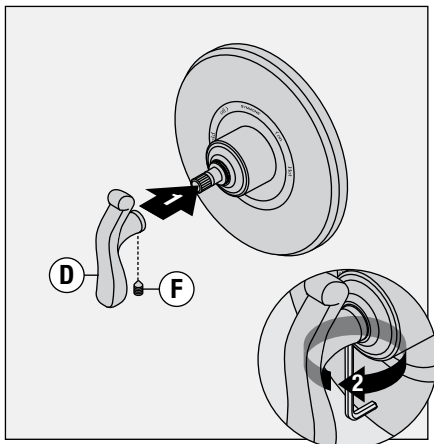


Note: Handles should be facing the 6 o'clock position.

- 5) Attach shower arm (B) and flange (C) to vertical shower pipe turning clockwise to tighten.

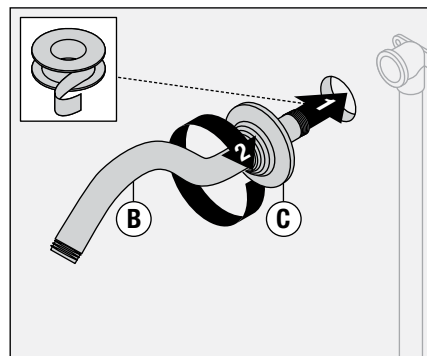


- 6) Install showerhead (A) to shower arm (B) turning clockwise to tighten.

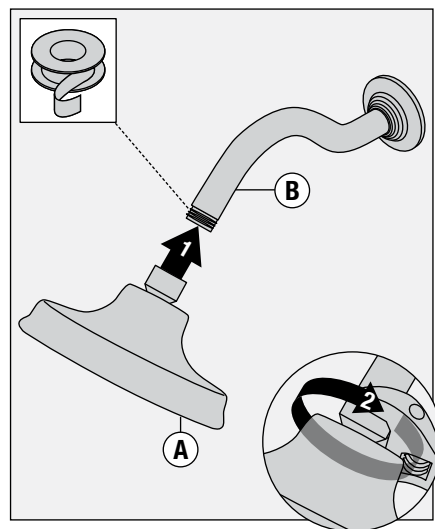


Operation

Temperature Control


- 1) Turn shower handle counterclockwise approximately 1/4 turn to put valve in cold position.

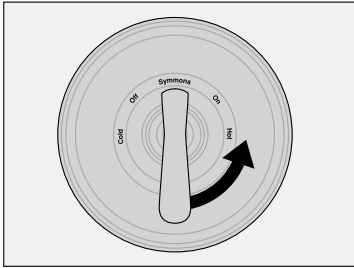

- 2) Turn shower handle counterclockwise approximately 1/2 turn to put valve in warm position.

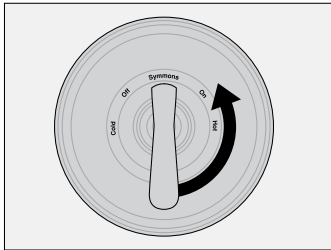

- 3) Turn shower handle counterclockwise approximately 3/4 turn to put valve in hot position.

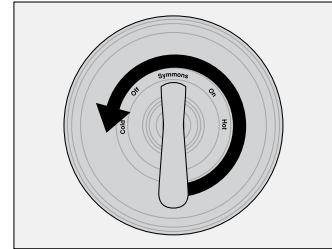

Care and Cleaning

- 1) Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.

Troubleshooting Chart

Problem	Cause	Solution
Finish is spotting.	Elements in water supply may cause water staining on finish.	Clean finished trim area with a soft cloth using mild soap and water or a non-abrasive cleaner and then quickly rinse with water.